


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

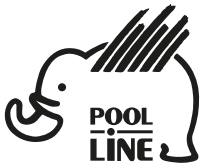

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.



Nº HOMOLOGACIÓN: E 9 26R-03.1042




RECICLABLE


123412

Rv: 05/2025

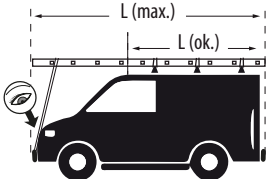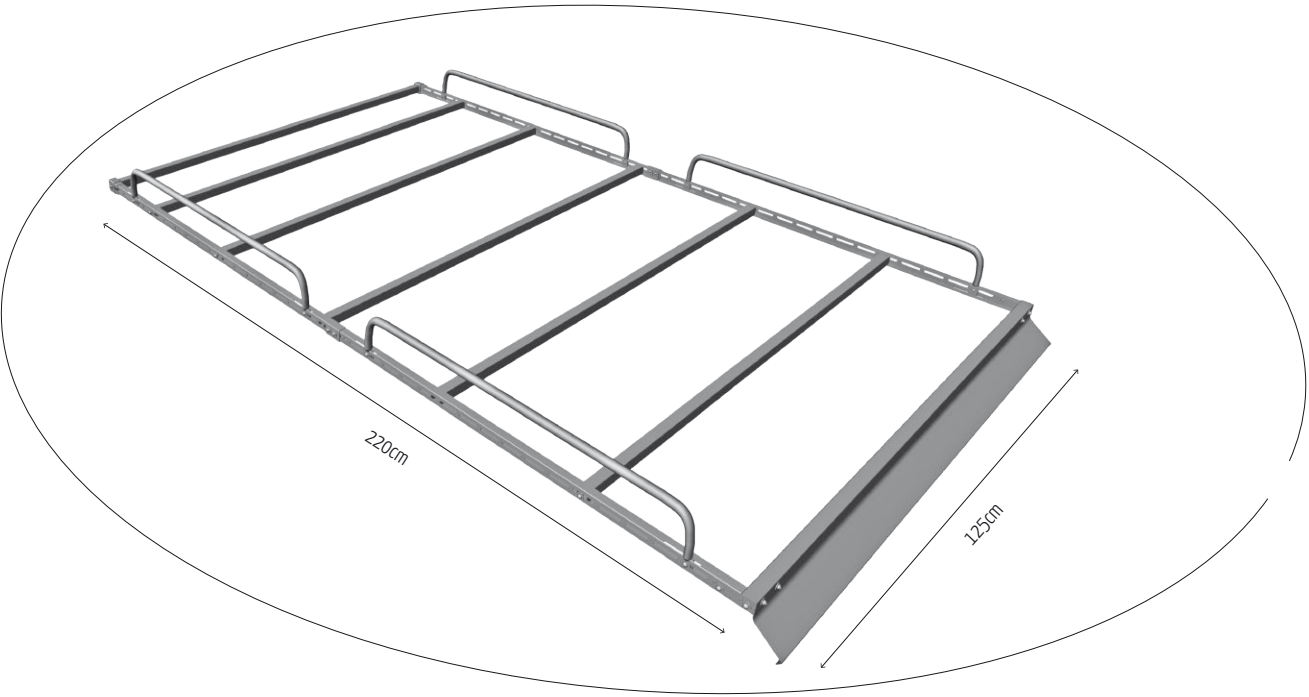

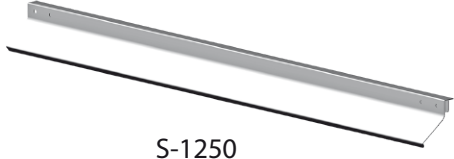N		Q
20	 S-1250	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1235	6
25		14
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2


N		Q
32		1

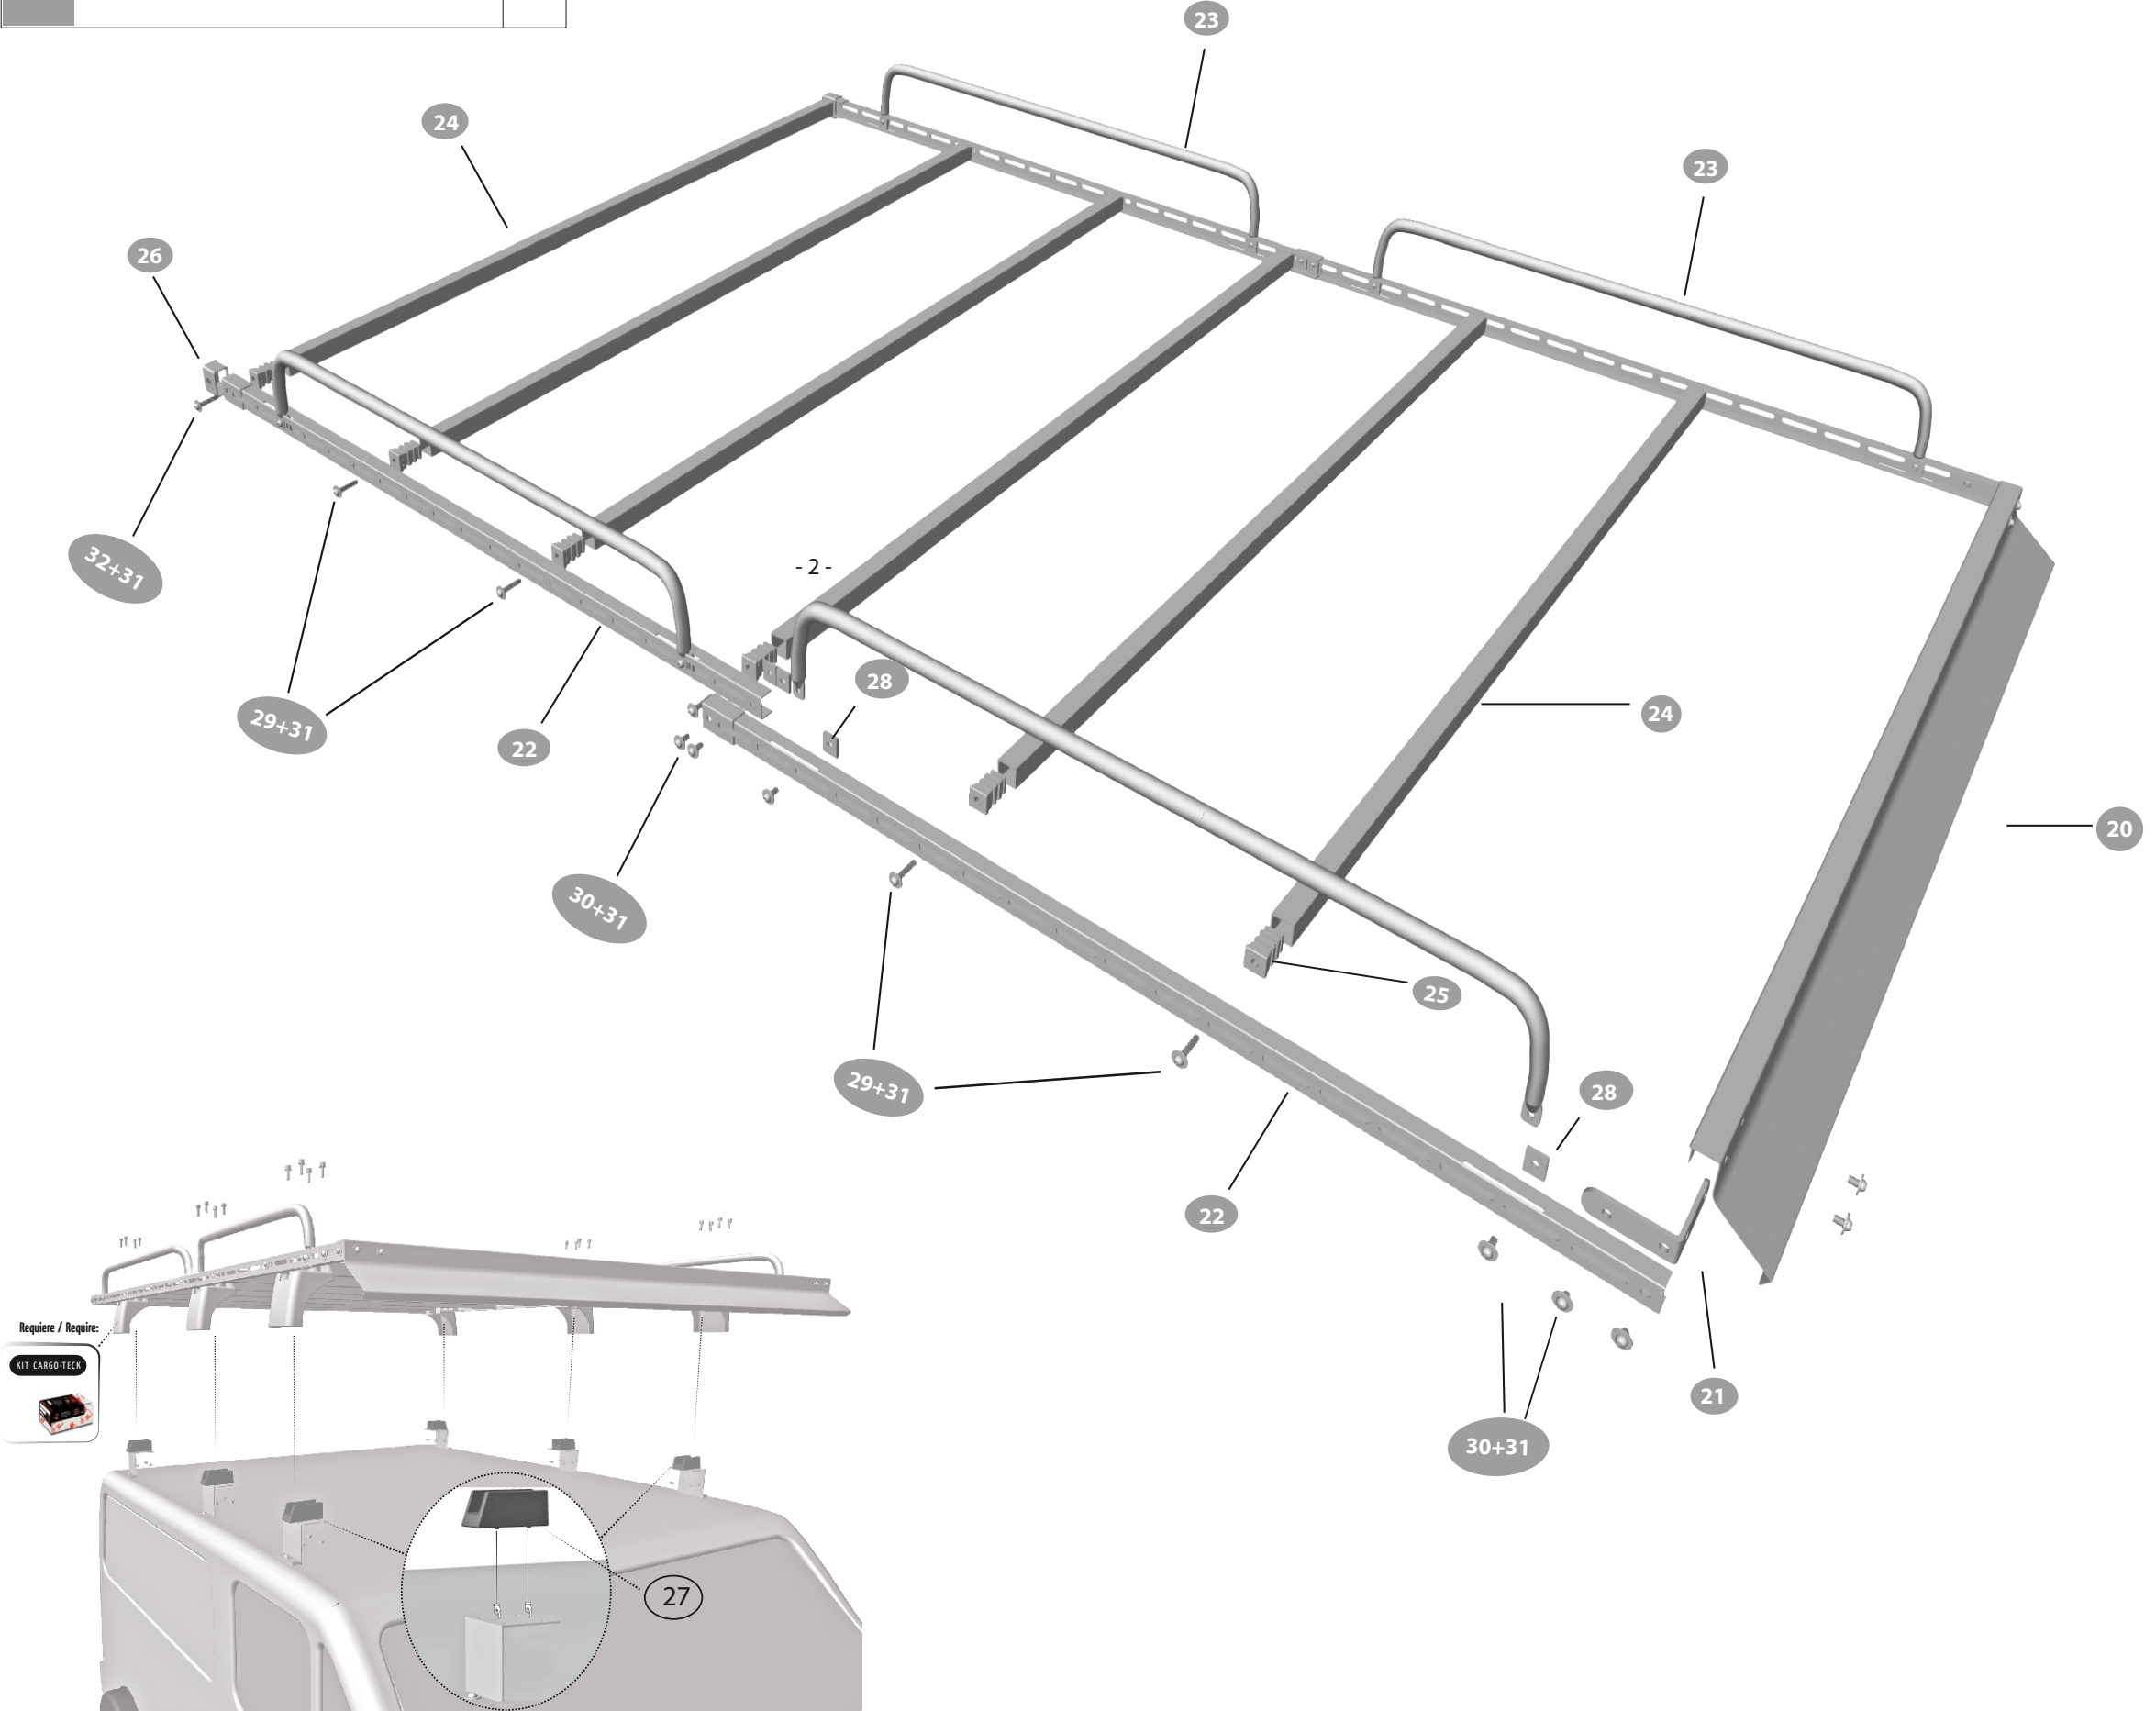




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


CITROËN C15

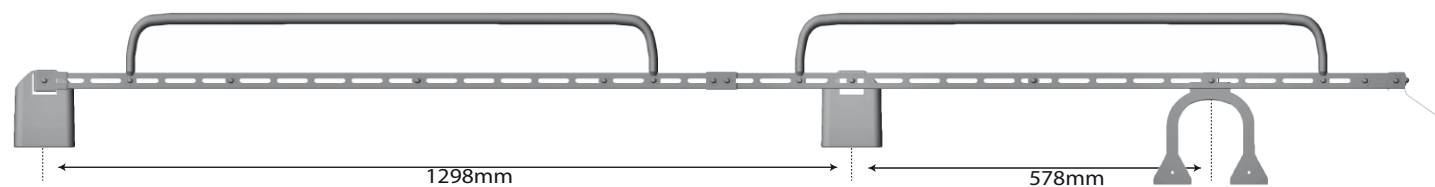



FORD CONNECT I L2 (04-13)

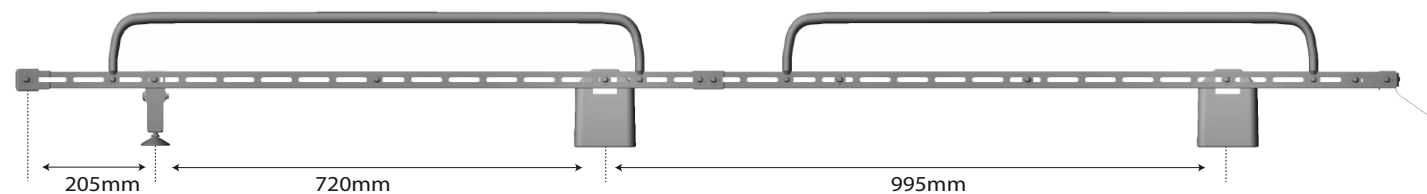



FORD CONNECT II L2 (13-)

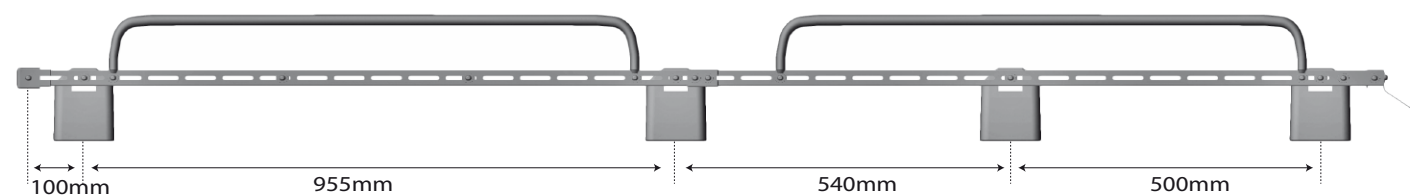

FORD CONNECT III L1 (2022->) VOLKSWAGEN CADDY V L1 (2021->)

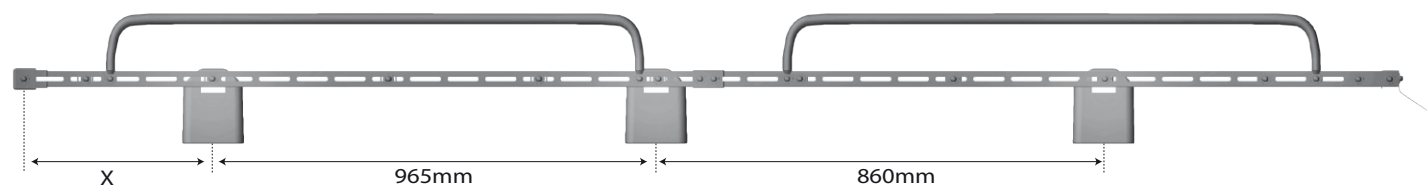


MERCEDES CITAN L3 NISSAN NV250 L2 RENAULT KANGOO II L3

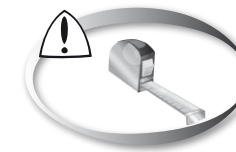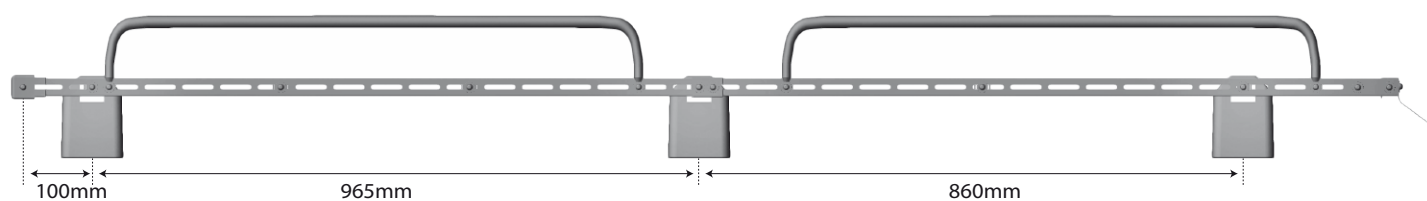


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


VOLKSWAGEN CADDY III L2 (04-13)

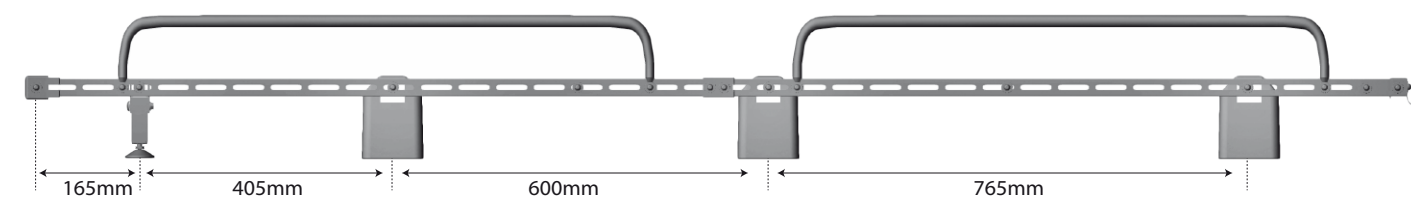


VOLKSWAGEN CADDY III.2 / IV L1 (2011-)

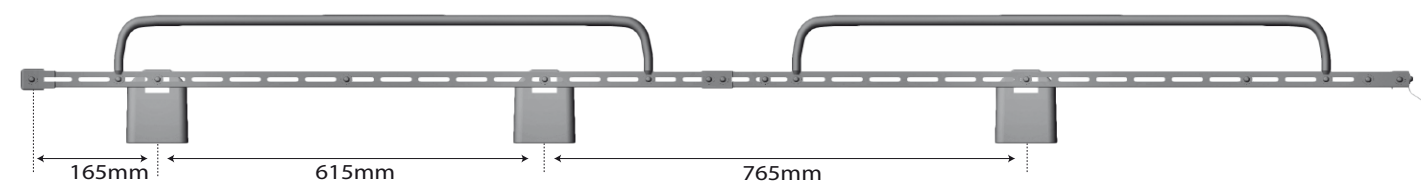


FORD COURIER II L1 (2024-)

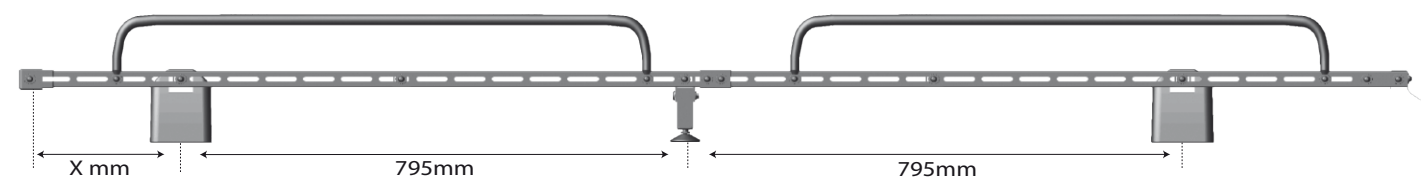


NISSAN KUBISTAR L2 / RENAULT KANGOO I L2 (97-09)

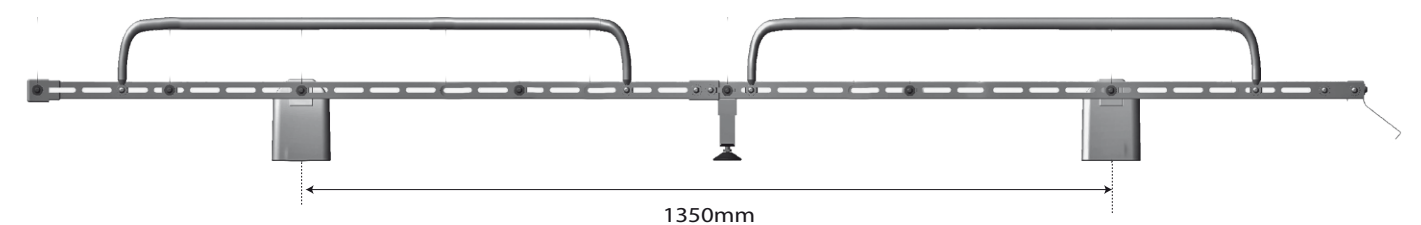


VOLKSWAGEN CADDY MAXI L2 (2011->)

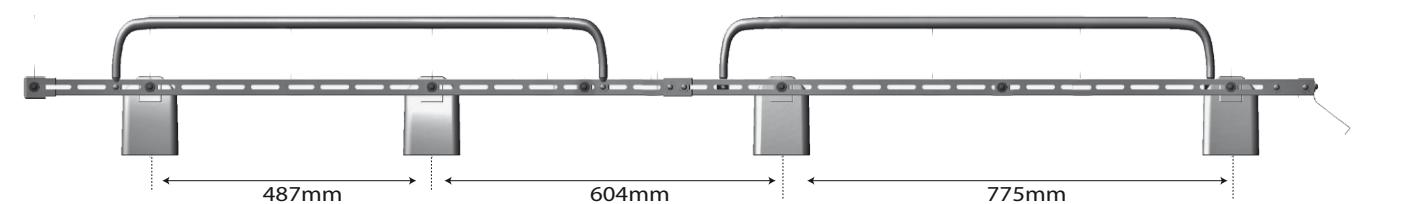



1




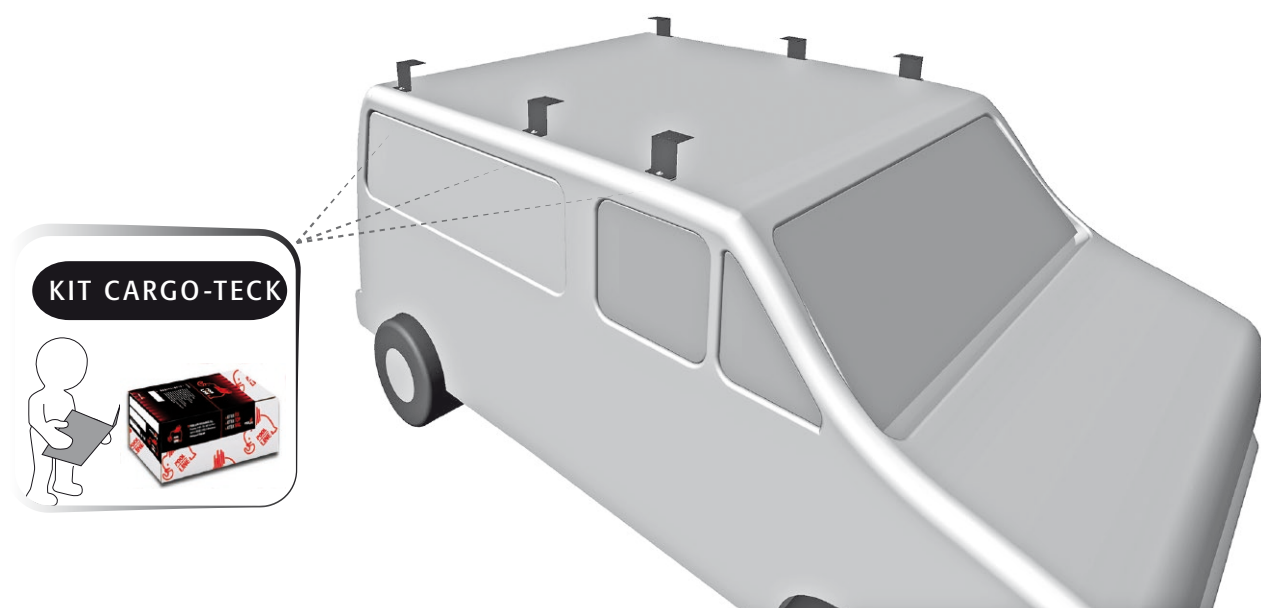


2

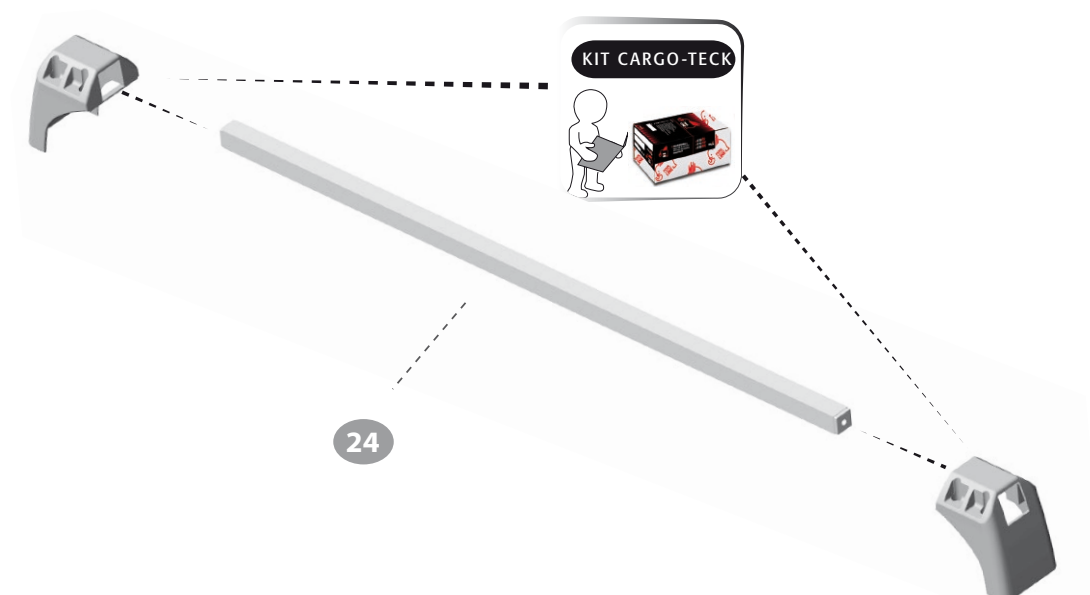


3

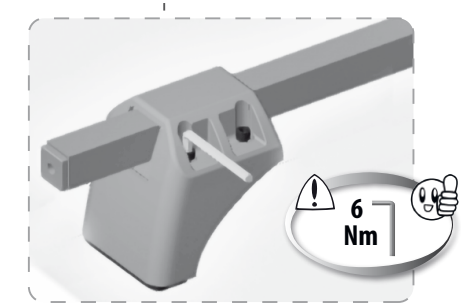
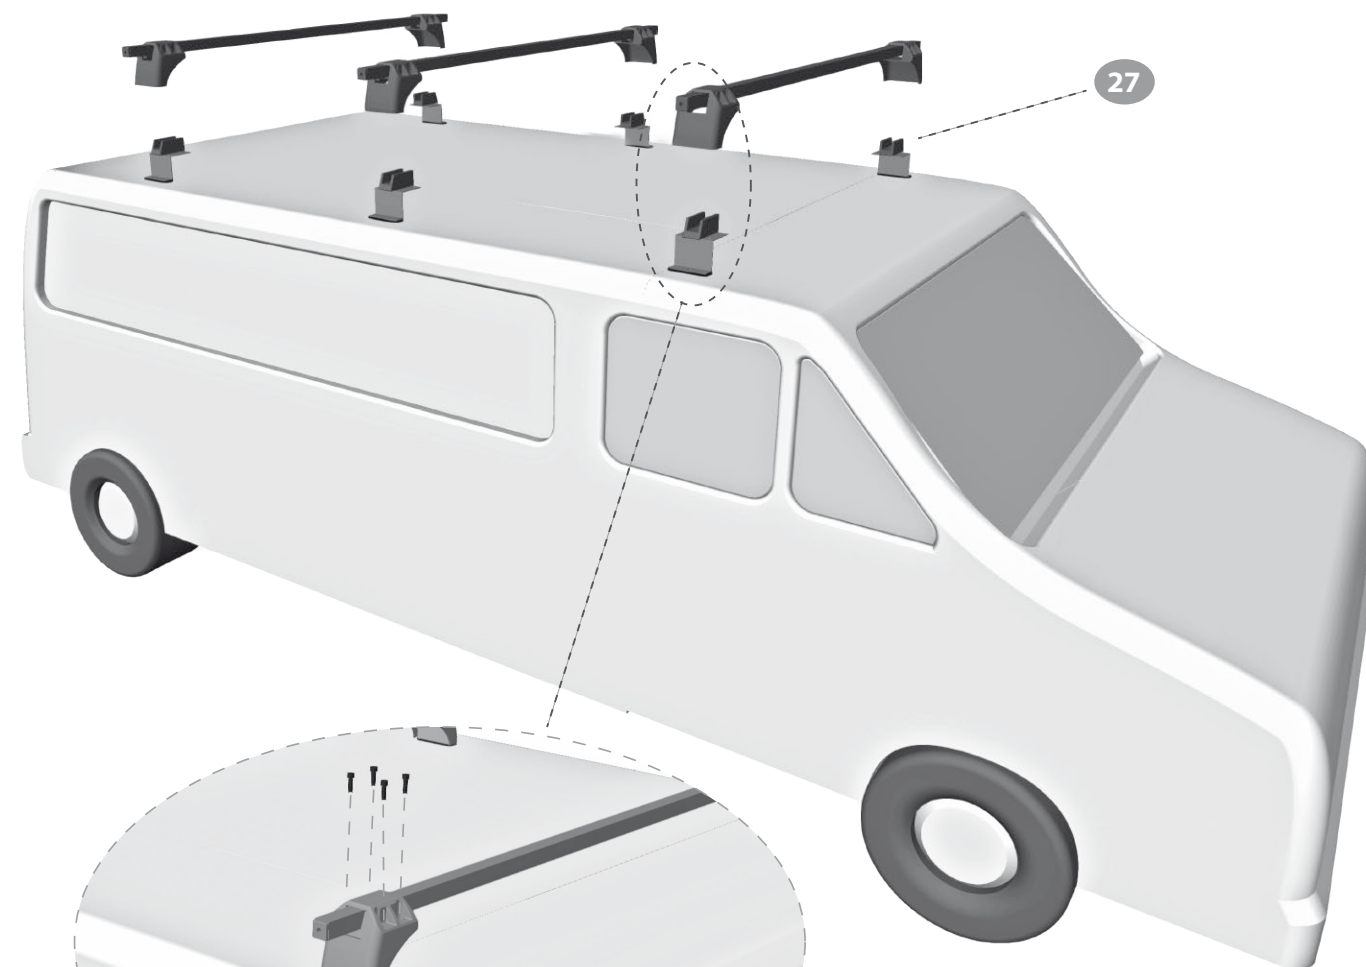





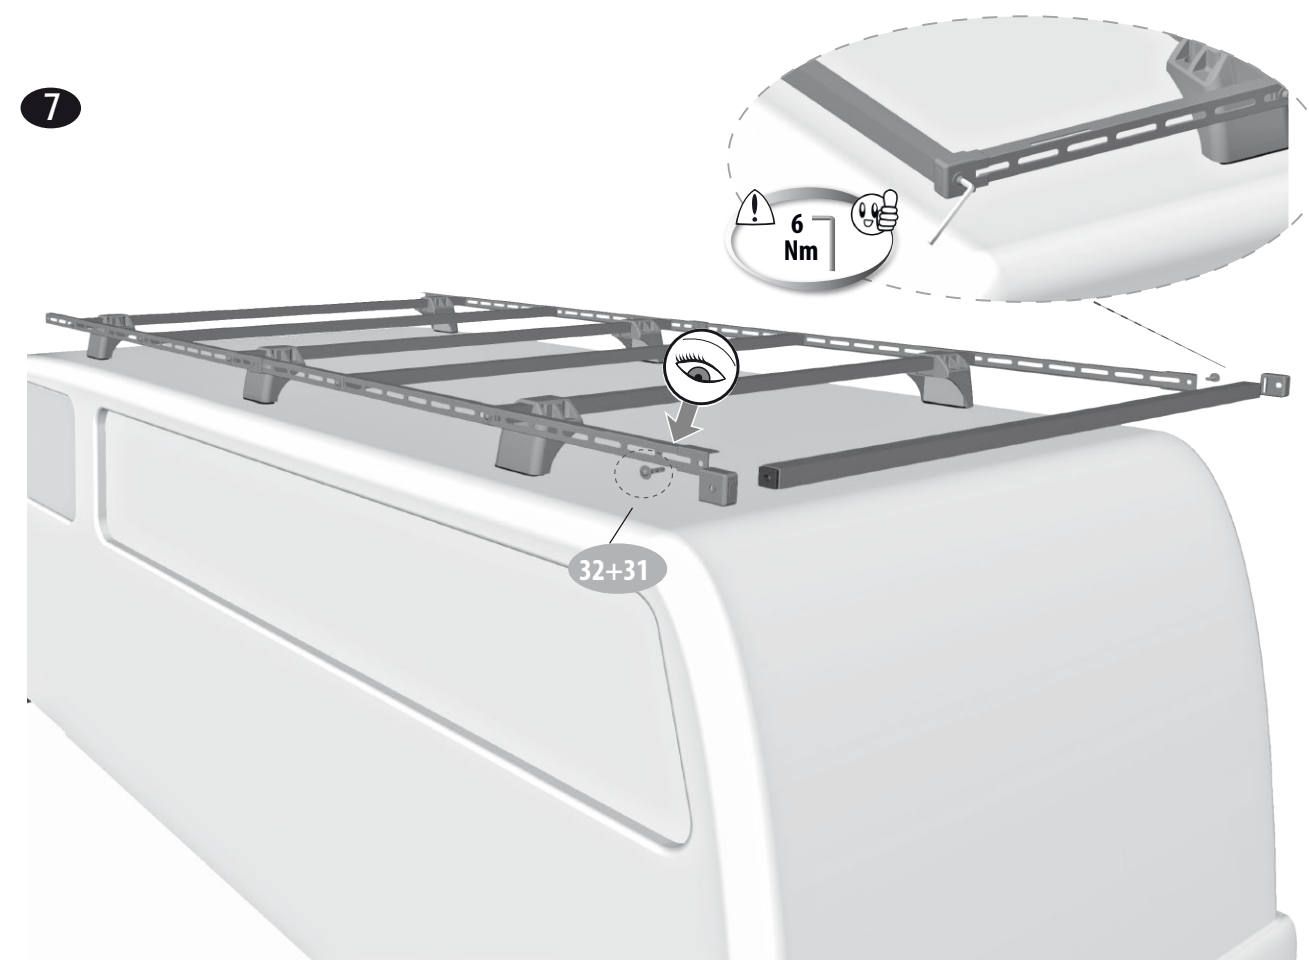
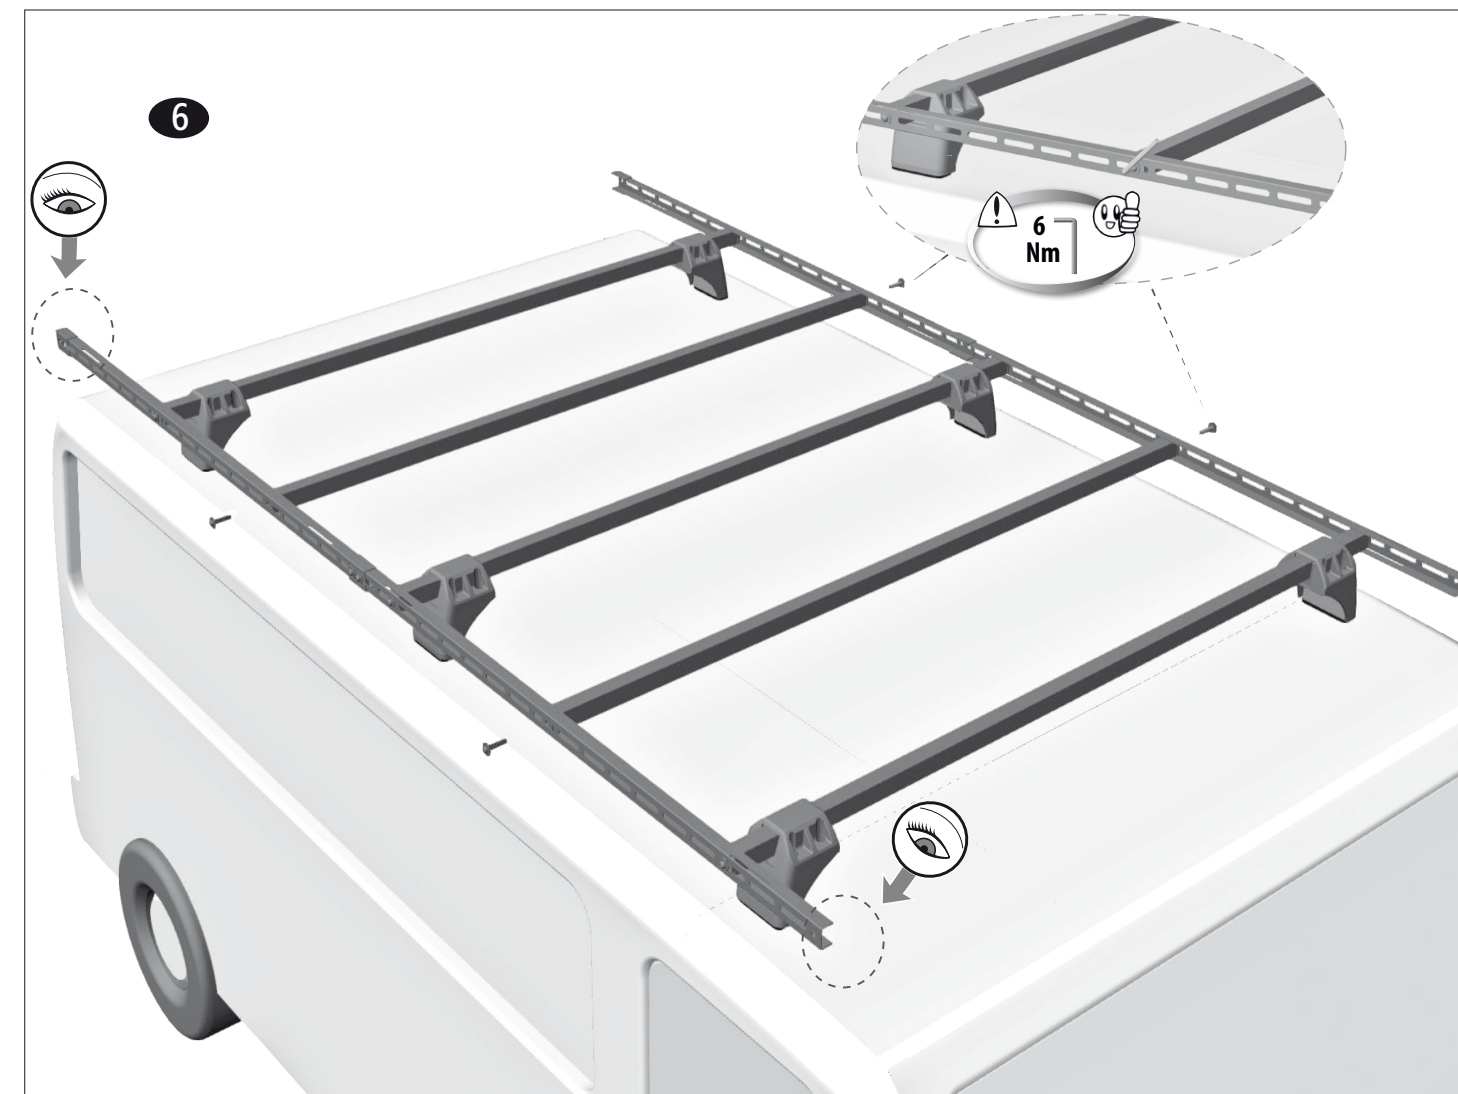
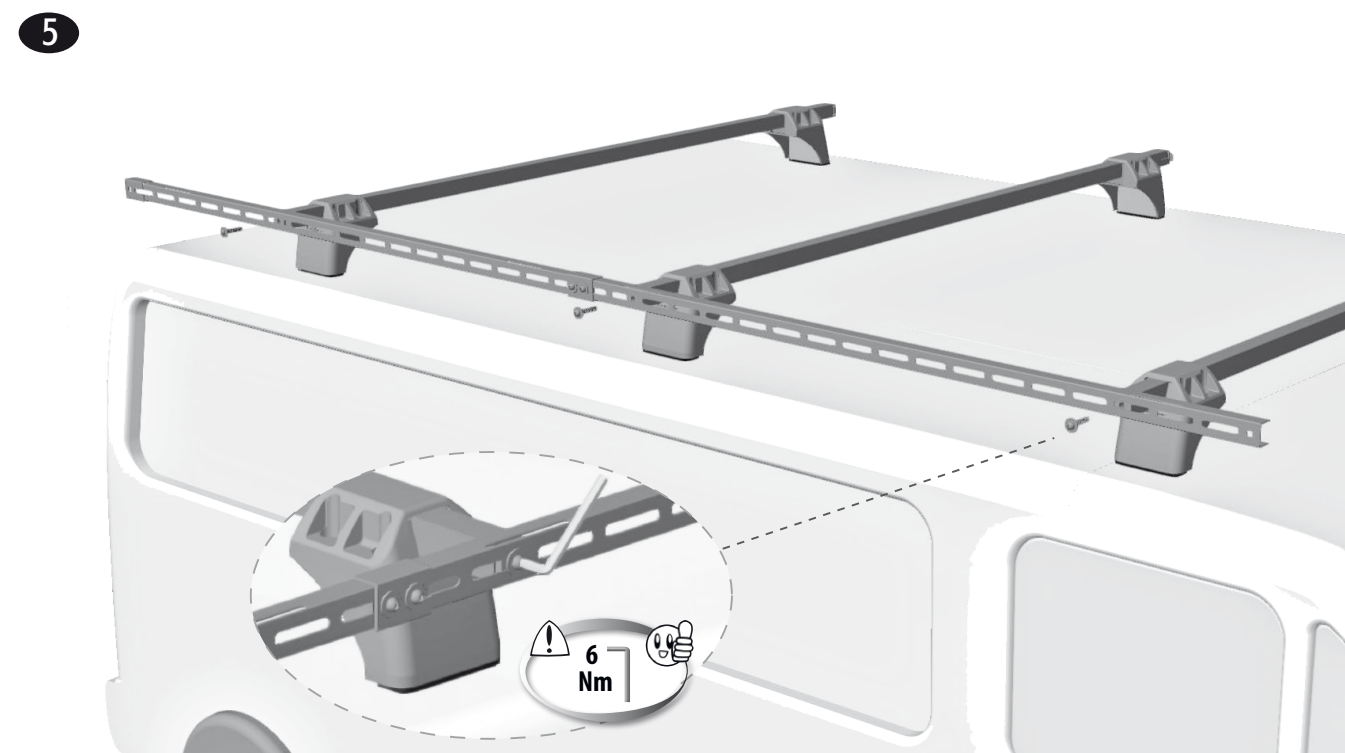
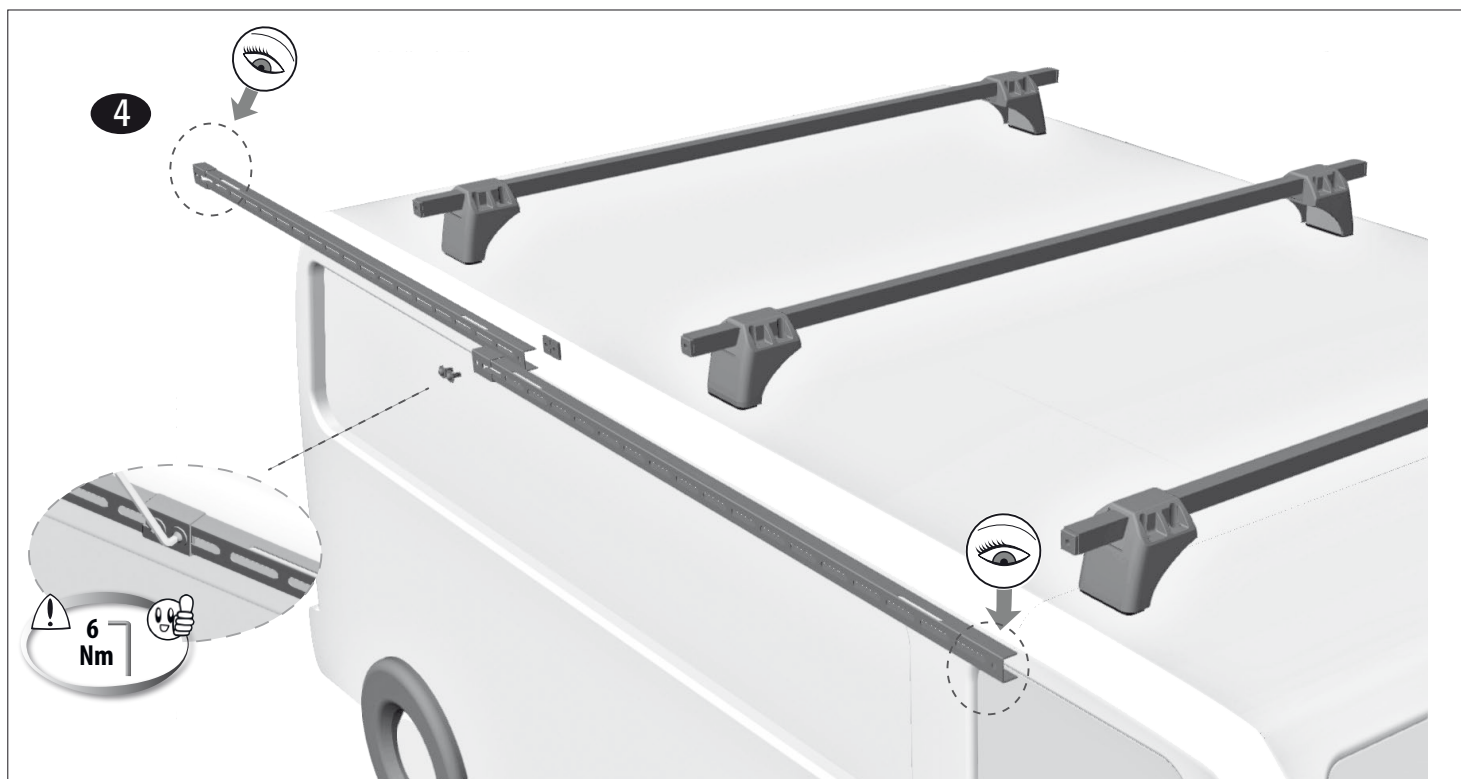



8

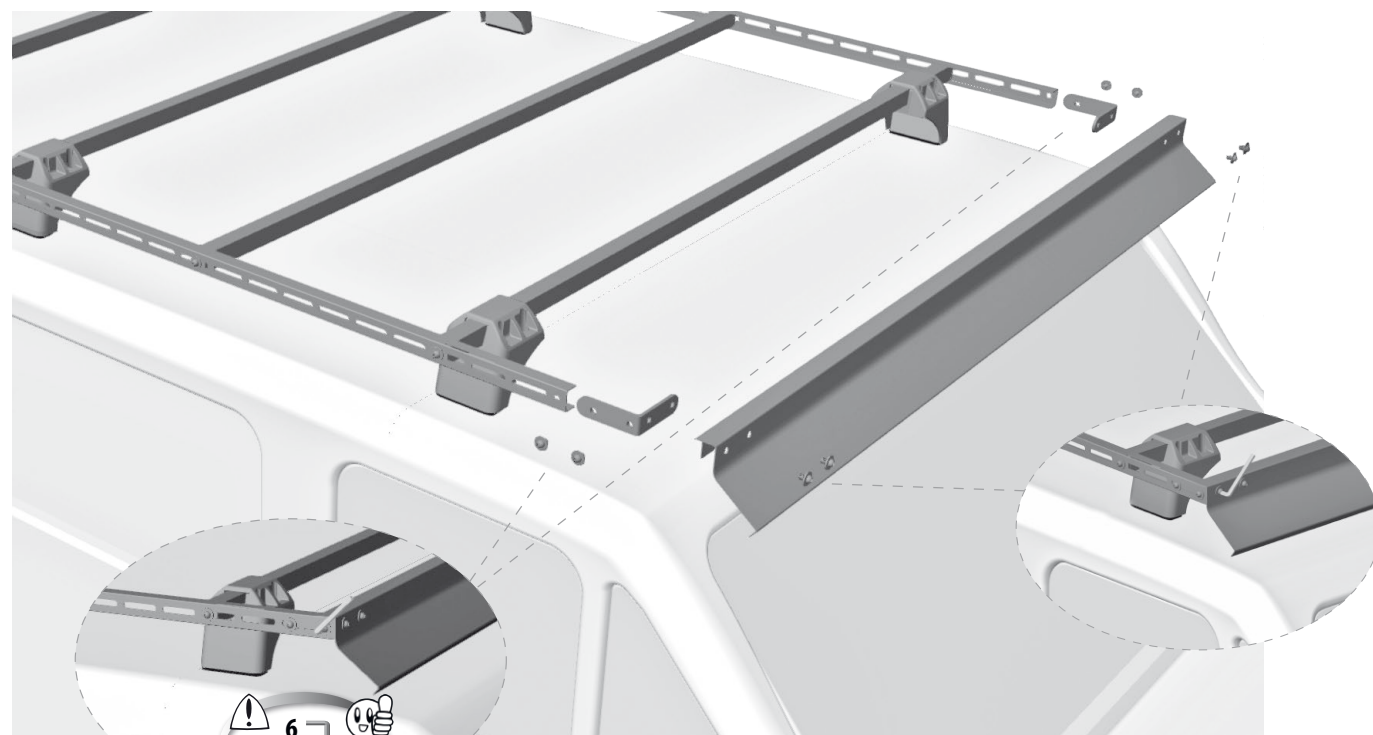


9

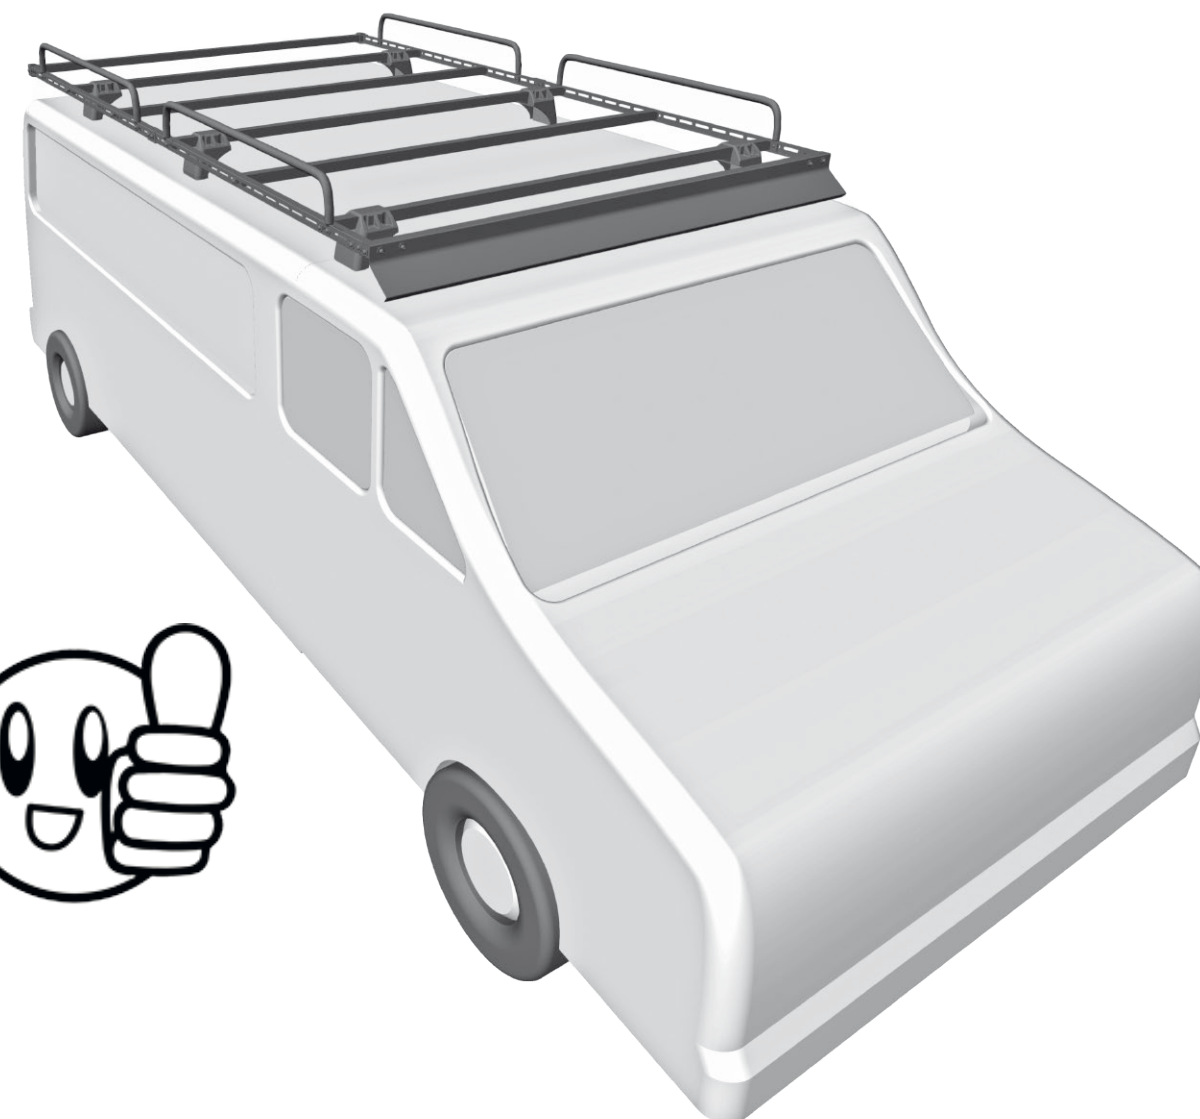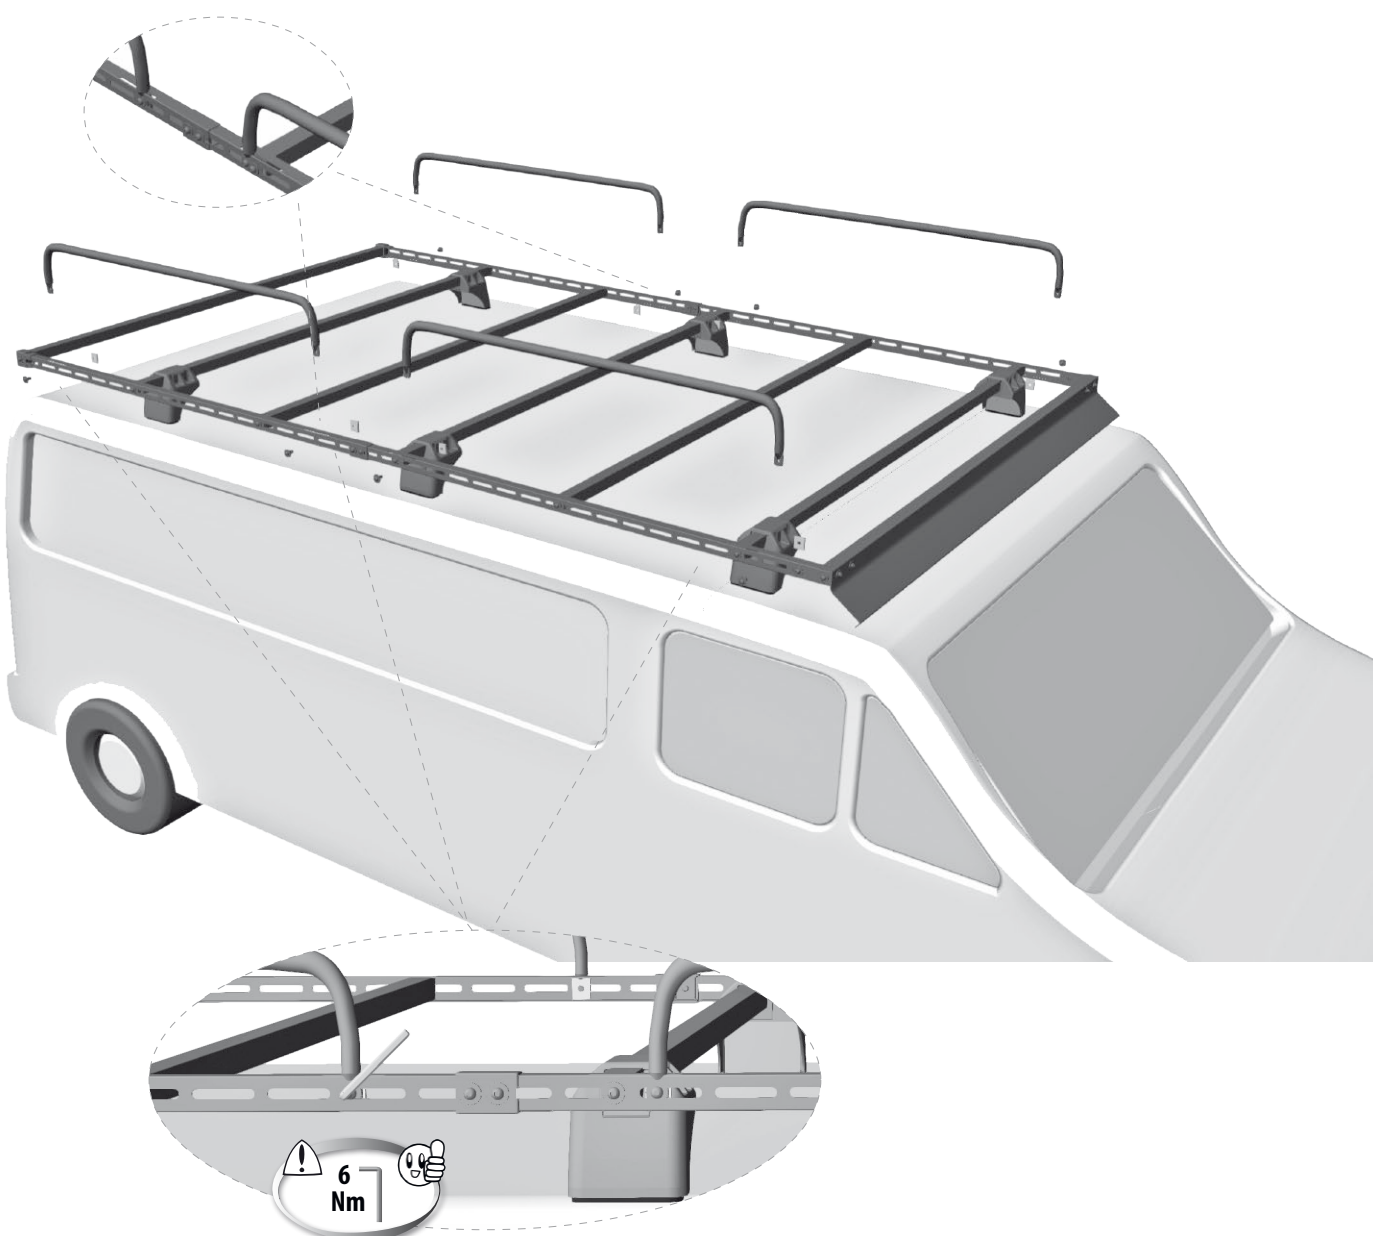

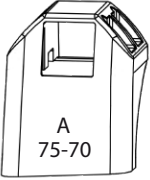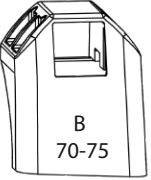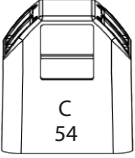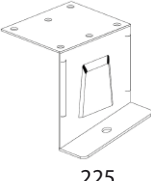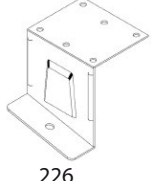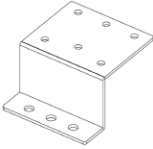N			Q			Q
1			2+2			4
2			2+2			4
3			8			
4			1			

N	BO0060 (x2)	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0010 (x4)	Q
10	 ISO 7380 M8X20	8
11	 DIN 125 Ø8	8

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujacy
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

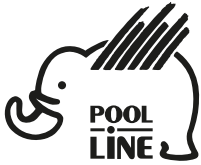



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

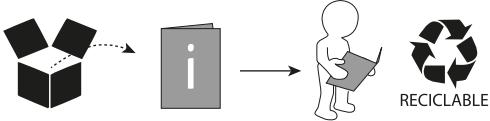

121062

Rv: 01/2025

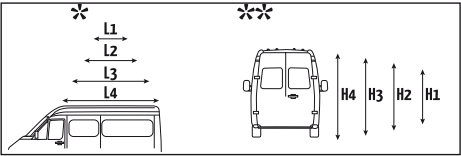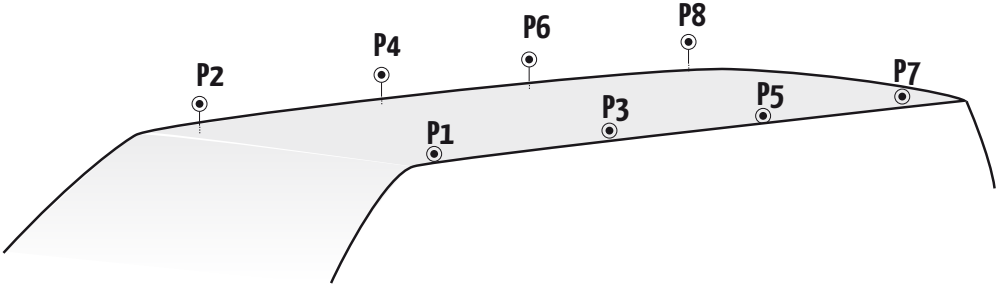


	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
VOLKSWAGEN Caddy Maxi III.2	L2	H1	11 - 15	BO0010	225+A	226+B	220+C	220+C	220+C	220+C	226+B	225+A




Limpieza pre-instalación

 Pre-installation cleaning

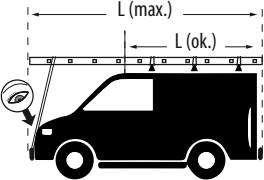

Revisar par de apriete

 Check torque

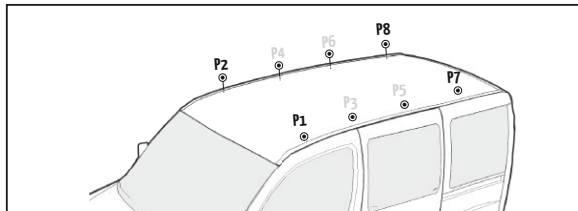

P1	P2	P3	P4	P5	P6	P7	P8
225+A	226+B	220	220	220	220	226+B	225+A


Pag. 1

226

225

A

B

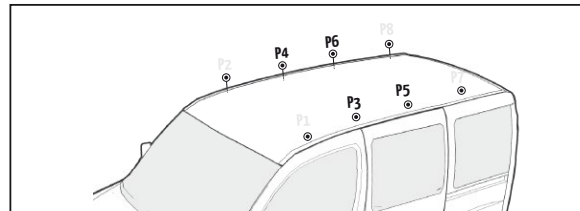

P1	P2	P3	P4	P5	P6	P7	P8
225	226	220+C	220+C	220+C	220+C	226	225

Pag. 1

220

C 54

A

2

3

B

6 Nm

A

2

3

B

6 Nm

1

2

5 Nm